

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written prior permission of the seller.

The seller provides this document without warranty, or condition of any kind. The seller may make improvements or change in the product described in this documentation at any time.

Other product and company name herein may be the trademarks of their respective owners.

©2007~2011 All rights reserved.

IMPORTANT SAFETY AND HEALTH INFORMATION

CAUTION
 LASER RADIATION DO NOT STARE INTO BEAM


MAX OUTPUT: <5mW
 WAVE LENGTH: 650±20nm
 CLASS III LASER PRODUCT

WARNING! RISK OF INJURY!

Laser beam can cause permanent damage to eyes. Do not look into the laser beam or shine the laser beam into your eyes, other peoples' eyes, or pet's eyes.

■ Install battery

Open the presenter battery storey cover, and base on battery electrode sign to install battery.

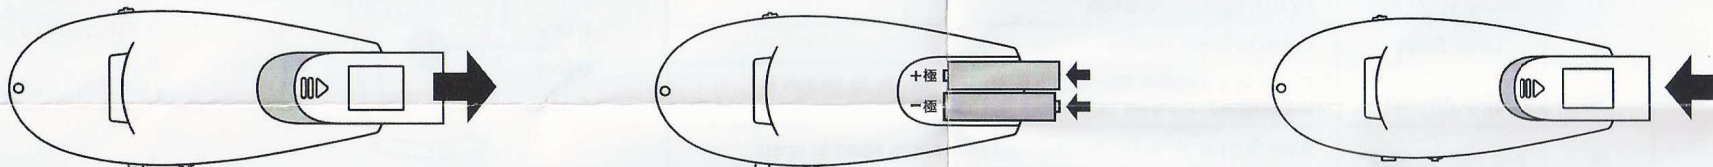


(Figure 1) Rear for all model


■ Install USB Receiver

Please plugs into USB receiver to USB port of computer. Now you can see system information that system will display "found new hardware" on notice bar. System will automatic update driver for the USB receiver unit display success.


■ Check your function list below model list base on your model

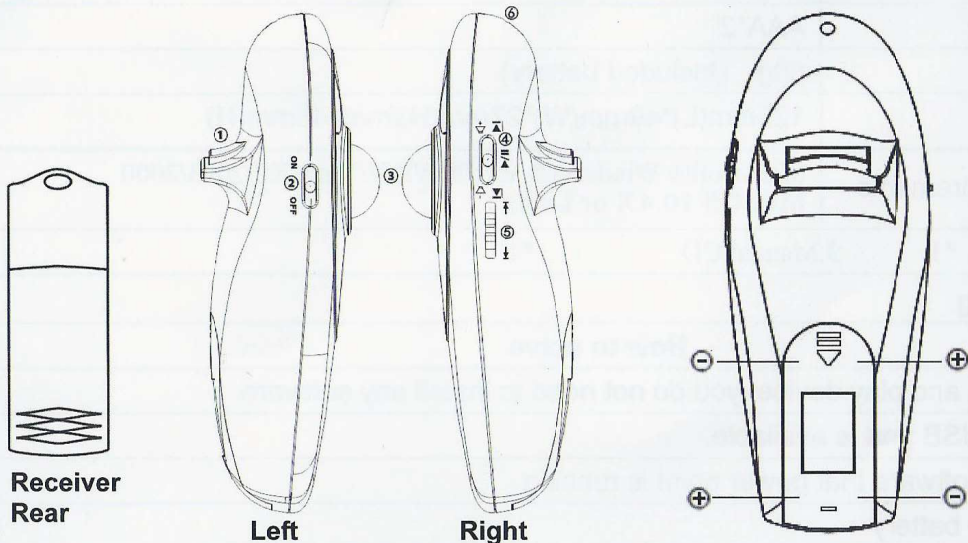


Item No.	Key name	Description
①	Mouse Left Key	Mouse Left key Function
②	ON / OFF	Power ON / OFF
③	Trackball	Move trackball to move cursor
④	Media Button	To control Media Player
⑤	Page Up/ Page Down	Page up or Page down
⑥	Laser Beam	Laser Beam On / Off

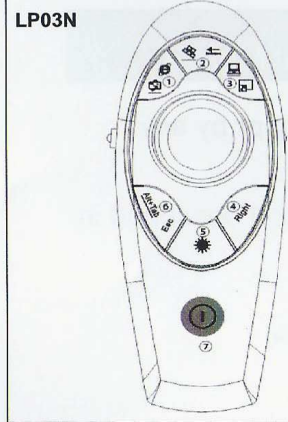

Item No.	Key name	Description
①	IE / Outlook	Press to open the Internet Browser, Hold down 3s to open the OUTLOOK software
②	Backspace / Soft Keyboard	Press to backspace function, Hold down 3s to open soft keyboard in windows system
③	Desktop/ My computer	Press to show desktop; Hold down 3s to open the my computer
④	Mouse Right key	Mouse right key function
⑤	Laser Beam	Press to Laser Pointer
⑥	ESC/ Alt+Tab	Press to executive Esc function, Hold down 3s to Switch in the opened windows between
⑦	Close/ Shut down	Press to close the current windows box, Hold down 3s to Shut down the computer.

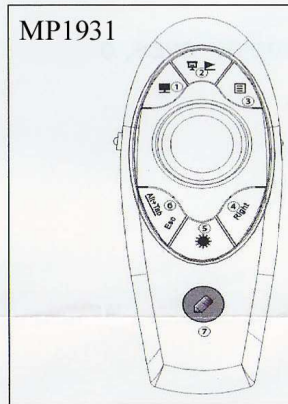

Item No.	Key name	Description
①	Dark Screen	Screen go dark
②	Start	Press to start slide from current page, Hold down 3s to start slide from home page
③	page navigation	After start slide, Press to open page navigation box, and select page to Positioning to the selected page .
④	Mouse Right key	Mouse right key function
⑤	Laser Beam	Press to Laser Pointer
⑥	ESC/ Alt+Tab	Press to executive Esc function, Hold down 3s to Switch in the opened windows between
⑦	Felt Pen/ Rubber	After Start slide, press to open Felt pen, press again to open rubber

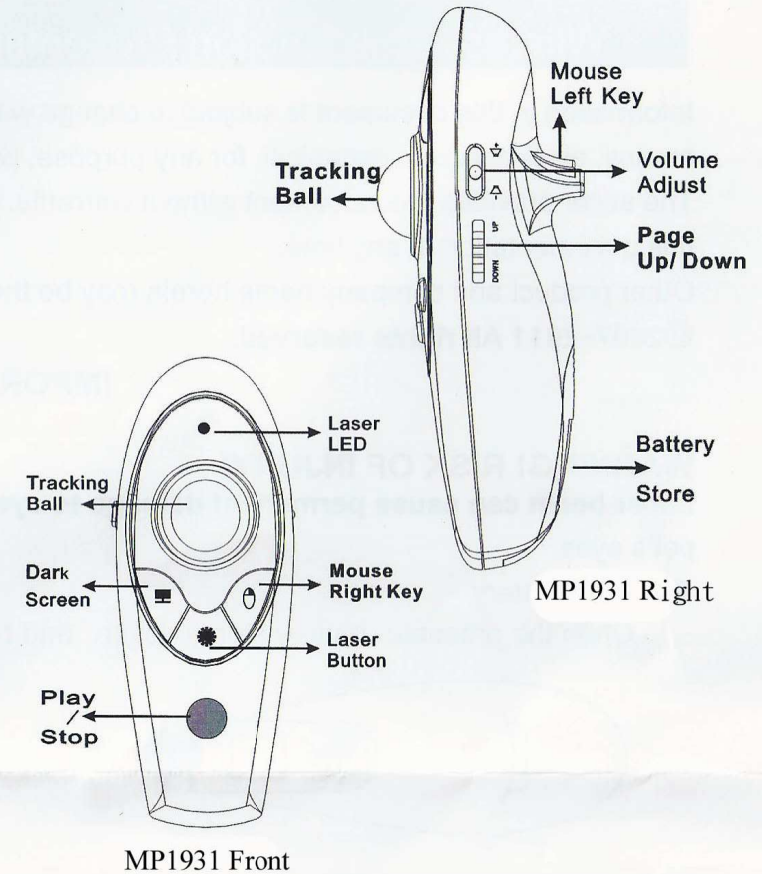

Above LP03N, LP05, LP2011 functional schematic diagram please carefully reading and the corresponding user function is used to better play its utility.

Specification

Mouse Resolution	1000CPI	Voltage	2.4V~3.3V
Frequency	2.4GHz	Power Supply	AAA*2
Distance	15M	Weight	80g (Included battery)
USB Port	USB 3.0/2.0/1.1	Dimension	125mm(L)*49mm(W)*27mm(H)/max.46mm(H)
Laser	Class III , Class II (optional)	System requirements	Microsoft® Windows® WIN8/WIN7/Vista/XP/2003/2000 Mac OS 10.4X or Later
Package Contents	1.Wireless Presenter *1	2.Receiver *1	3.Manual CD *1

Trouble shooting

Question	How to solve
Need to install software for first use of the Presenter?	No, this is a plug and play device; you do not need to install any software.
Don't identify USB Receiver	Please confirm USB port is available.
Don't play ppt	Please confirm software that power point is running
No Laser Bean	Replacing a new battery